

СПИСОК ЗАПАСНЫХ ЧАСТЕЙ SMA-200

20	-00-19	Screw	1
19	-00-08/10	Guide wheel	1
18		Bearing 608	2
17		Jump ring Ø22	1
16	-00-09/15	Shim of guide wheel	1
15	-00-11/12	Tool holder	1
14	-00-03	Bearing cap	1
13	-00-04	Axsi of tool holder	1
12		Bearing 6204	1
11		Nut M20*1	1
10		Bearing 6203	1
9		Jump ring	1
8		Shim of bevel gear	1
7	-00-07	Set plate	1
6	-00-05	Adjusting ring	1
5	-00-06	Adjust cap	1
4	-00-01	Bearing holder	1
3		Bevel gear	1
2		Motor	1
1		Handle	1
No.	Part code	Part name	Qty.

Кромкофрезерный станок SMA-200 K15

sto-ipm.ru

